

## Features

### TrueAlarm analog sensing

You can use TrueAlarm analog sensing to digitally transmit analog sensor values with IDNet two-wire communications.

You can use True Alarm analog sensing with 4007ES, 4010ES, 4100ES series Autocall fire alarm control units (FACUs).

### Features compatible with the FACU

- Peak value logging with accurate analysis of each sensor for individual sensitivity selection
- Sensitivity monitoring meets NFPA 72 sensitivity testing requirements. The automatic individual sensor calibration check verifies sensor integrity
- Automatic environmental compensation, multi-stage alarm operation, and display of sensitivity directly in percent for each foot
- Display and print detailed sensor information in English

### Photoelectric smoke sensors features

- Sensitivity levels from 0.2% to 3.1%. See [TrueAlarm sensors](#) for more information.

### Heat sensors features

- Three fixed temperature sensing thresholds: 135°F, 155°F and 190°F
- Rate-of-rise temperature sensing
- Utility temperature sensing
- Listed to UL 521 and ULC-S530

### General features

- Ceiling or wall mounting
- Listed to UL 268 7th Edition and ULC-S529
- NEMA 1 rated. See [TrueAlarm analog sensing product selection chart](#) for more information.
- Louvered smoke sensor design enhances smoke capture by directing flow to chamber. Entrance areas are minimally visible when ceiling mounted
- Designed for EMI compatibility
- Magnetic testing
- Different bases support a supervised or unsupervised output relay, or a remote LED alarm indicator

### Additional base reference

- For isolator bases, refer to data sheet [AC4098-0025](#)
- For isolator2 bases, refer to data sheet [AC4098-0026](#)
- For sounder bases, refer to data sheet [AC4098-0028](#)
- For photo/heat sensors, refer to data sheet [AC4098-0024](#), single address and [AC4098-0033](#), dual address

## Description

### Digital communication of analog sensing

TrueAlarm analog sensors provide an analog measurement digitally communicated to the host control panel using Autocall addressable communications. The control unit analyses the data, determines an average value, and stores it. Comparing the sensor's present value against its average value and time, determines an alarm or other abnormal condition.

### Intelligent data evaluation


Monitoring each sensor's average value provides a continuously shifting reference point. A software filtering process compensates for environmental factors, such as dust and dirt, and component aging, to

provide an accurate reference for evaluating new activity. This reduces the probability of false or nuisance alarms caused by shifts in sensitivity.

### Control unit selection

The control unit stores peak activity for each sensor for evaluating specific locations. The host control unit determines the alarm set point for each TrueAlarm sensor, selectable as more or less sensitive as the individual application requires.

**Figure 1: A4098-9714 TrueAlarm photoelectric sensor mounted in base**

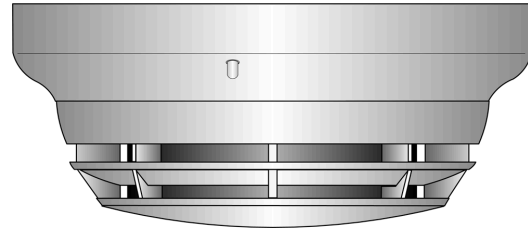

### Timed/multi-stage selection

You can program the sensor alarm set points for timed automatic sensitivity selection, such as more sensitive at night or less sensitive during day. You can program the control unit to provide multi-stage operation for each sensor.

### Sensor alarm and trouble LED indication

Each sensor base's LED pulses to indicate communications with the unit. If the control unit determines a sensor is in alarm, is dirty, or has some other type of trouble, the details display at the control unit and the sensor's base LED turn on steadily. During a system alarm, an LED indicating a trouble returns to pulsing to help identify the alarmed sensors.

## TrueAlarm sensor bases and accessories

### Sensor base features

#### Base mounted address selection

- Address remains with its programmed location
- Accessible from front, DIP switch under sensor

#### General features

- Automatic identification provides default sensitivity when substituting sensor types
- Integral red LED for power-on, pulsing, or alarm or trouble, steady on
- Locking anti-tamper design mounts on standard outlet box
- Magnetically-operated functional test

## Sensor bases

### A4098-9792, standard sensor base

### A4098-9789, sensor base with wired connections

- A2098-9808 remote LED alarm indicator or A4098-9822 relay. The relay is unsupervised and requires separate 24 VDC.

### Supervised relay bases :

- **A4098-9791, four-wire sensor base**, use with remote or locally mounted A2098-9737 relay, requires separate 24 VDC
- **A4098-9780, two-wire sensor base**, use with remote or locally mounted A4098-9860 relay, no separate power required
- You can program supervised relay operation, and manually operate it from the control unit
- Includes wired connections for remote LED alarm indicator **or** A4098-9822 relay, relay is unsupervised and requires separate 24 VDC

## Sensor base options

### A2098-9737, remote or local mount supervised relay

- DPDT contacts for resistive or suppressed loads
- power limited rating of 3 A at 28 VDC
- non-power limited rating of 3 A at 120 VAC, requires external 24 VDC coil power

### A4098-9860, remote or local mount supervised relay

- SPDT dry contacts, power limited rating of 2 A at 30 VDC, resistive. Non-power limited rating of 0.5 A at 125 VAC, resistive

### A4098-9822, LED annunciation relay

- Activates when base LED is on steady, indicating local alarm or trouble
- DPDT contacts for resistive or suppressed loads, power limited rating of 2 A at 28 VDC. Non-power limited rating of 1/2 A at 120 VAC, requires external 24 VDC coil power


### 4098-9832, adapter plate

- Required for surface or semi-flush mounting to 4 in. square electrical box and for surface mounting to a 4 in. octagonal box
- You can use the 4098-9832 adapter plate for cosmetic retrofitting to an existing 6 3/8 in. diameter base product

### A2098-9808, remote red LED alarm indicator

- Mounts on single gang box

Figure 2: Remote red LED alarm indicator

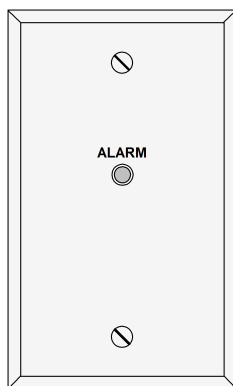

## Description

TrueAlarm sensor bases contain integral addressable electronics that monitor the status of the detachable photoelectric or heat sensors. The sensors transmit digitalized output to the system fire alarm control unit every four seconds.

You can change different TrueAlarm sensor types to meet location requirements. You can use this feature to substitute sensors during building construction. When conditions are temporarily dusty, you can install heat sensors without reprogramming the control unit. Although the control unit indicates an incorrect sensor type, the heat sensor operates at a default sensitivity and provides heat detection for building protection at that location.

## Mounting reference

Figure 3: Mounting reference

### Electrical Box Requirements: (boxes are by others)

**Without relay in the box:** 4" octagonal or 4" square, 1-1/2" deep; single gang, 2" deep

**With relay in the box:** 4" octagonal or 4" square, 1-1/2" deep, with 1-1/2" extension ring

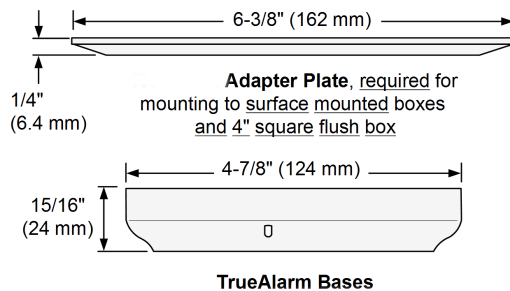
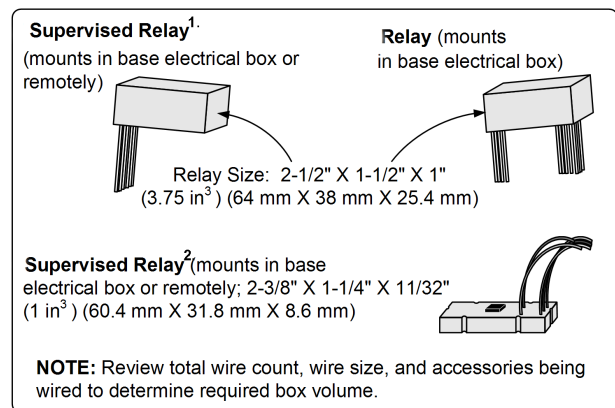
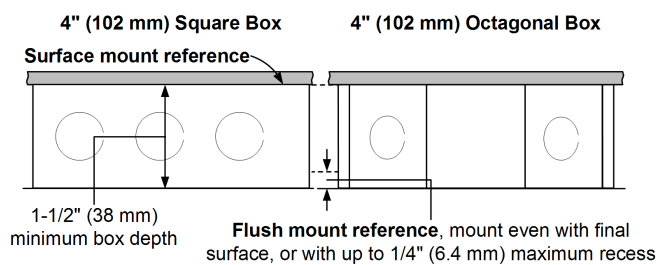


Table 1: Product mounting - Model reference

Product	Model
Relay	A4098-9822
Supervised relay	Example 1 A2098-9739 Example 2 A4098-9860
Adapter plate	4098-9832
TrueAlarm bases	A4098-9780, A4098-9789, A4098-9791, A4098-9792

## TrueAlarm sensors

### Features

- Sealed against rear air flow entry
- Interchangeable mounting
- EMI/RFI shielded electronics
- Heat sensors:
  - Selectable rate-compensated, fixed temperature sensing with or without rate-of-rise operation

**Table 2: Rated spacing distance between sensors**

Fixed Temp. Setting	UL and ULC Spacing	FM Spacing, Either Fixed Temperature Setting
135°F (57.2°C) 190°F (88°C)	60 ft x 60 ft (18.3 m)	20 ft x 20 ft (6.1 m) for fixed temperature only. RTI = Quick
155°F (68°C)	40 ft x 40 ft (12.2 m)	50 ft x 50 ft (15.2 m) for fixed temperature with either rate-of-rise selection. RTI = Ultra Fast

**Note:** 190°F (88°C) ratings only apply to the A4098-9734 sensor.

### Smoke sensors

- Photoelectric technology sensing
- 360° smoke entry for optimum response
- Built-in insect screens


### A4098-9714 photoelectric sensor

TrueAlarm photoelectric sensors use a stable, pulsed LED light source and a silicon photodiode receiver to deliver low power smoke sensing. There are three user-selectable sensitivities for special applications for each individual sensor: 0.2%, 0.5%, and 1% for each foot. Standard sensitivity is 1.25% to 3.1% for each foot. The fire alarm control unit can vary the sensitivity for normal applications between 1.25% and 3.1% for each foot.

**Note:** Fixed sensitivity settings higher than 1.0% for each foot are not UL268 7th Edition compliant.

The sensor head design provides 360° smoke entry for response to smoke from any direction. Due to its photoelectric operation, air velocity is not normally a factor, except for impact on area smoke flow.

**Figure 4: A4098-9714 photoelectric sensor with base**

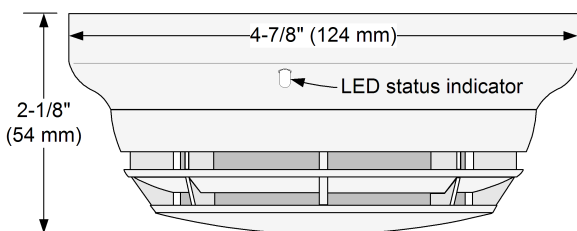

### A4098-9733 and A4098-9734 heat sensors


TrueAlarm heat sensors are self-restoring and provide rate-compensated, fixed temperature sensing with or without rate-of-rise temperature sensing. The sensor measures the local temperature for analysis at the fire alarm control unit.

You can select rate-of-rise temperature detection at the control unit for either 15°F or 20°F, (8.3°C or 11.1°C) for each minute. Fixed temperature sensing is independent of rate-of-rise sensing and you can program it to operate at 135°F or 155°F (57.2°C or 68°C). The A4098-9734 sensor provides an additional 190°F (88°C) set point.


In a slowly developing fire, the temperature may not increase rapidly enough to operate the rate-of-rise feature. However, when the temperature reaches the rated fixed temperature setting, it triggers an alarm.

You can program TrueAlarm heat sensors as a utility device to monitor for temperature extremes in the range of 32°F to 155°F (0°C to 68°C). This feature can provide freeze warnings, or alert you to HVAC system problems. Refer to panel specifications for availability.

**Figure 5: A4098-9733 heat sensor with base**

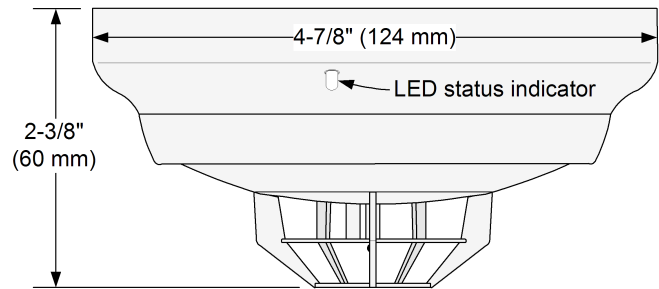

**Figure 6: A4098-9734 high temperature heat sensor with base**

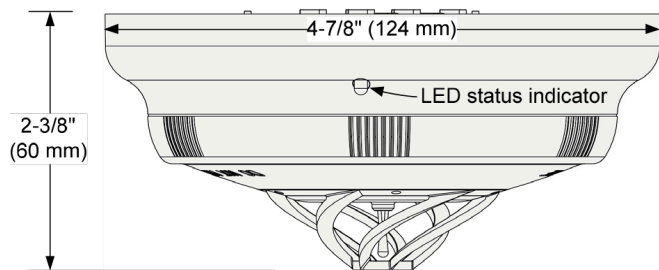

**WARNING:** In most fires, hazardous levels of smoke and toxic gas can build up before a heat detection device would initiate an alarm. In cases where Life Safety is a factor, the use of smoke detection is highly recommended.

### Application reference

Only choose sensor locations after careful consideration of the physical layout and contents of the area that you want to protect. Refer to NFPA 72, *the National Fire Alarm and Signaling Code*. On smooth ceilings, you can use a smoke sensor spacing of 30 ft (9.1 m) as a guide.

For detailed application information including sensitivity selection, refer to *A4098 Detectors, Sensors, and Bases Application Manual (574-709AC)*.

## TrueAlarm analog sensing product selection chart

**Table 3: TrueAlarm sensor bases, for use with sensors A4098-9714 and A4098-9733**

Model	Color	Description	Compatibility	Mounting requirements
A4098-9792	White	Standard sensor base	No options	4 in. octagonal or 4 in. square box, 1 1/2 in. min. depth, or single gang box, 2 in. min. depth
A4098-9776	Black			
A4098-9789	White	Sensor base with connections for remote LED alarm indicator <b>or</b> unsupervised relay	A2098-9808 remote alarm indicator or A4098-9822 unsupervised relay	4 in. octagonal or 4 in. square box <b>Note:</b> Box depth requirements depend on total wire count and wire size. See Table 5
A4098-9775	Black			
A4098-9791	White	Four-wire sensor supervised relay base with connections for LED indicator or unsupervised relay	A2098-9737 supervised remote relay	
<b>Note:</b> NOT compatible with the 2120 CDT			A2098-9808 remote alarm indicator or A4098-9822 unsupervised relay	
A4098-9780	White	Two-wire sensor supervised relay base with connections for LED indicator or unsupervised relay	A4098-9860 supervised remote relay	
<b>Note:</b> NOT compatible with the 2120 CDT			A2098-9808 remote alarm indicator or A4098-9822 unsupervised relay	

Refer to *A4098 Detectors, Sensors, and Bases Application Manual (574-709AC)* and *A4098 Smoke/Heat Sensor Bases Installation Instructions (574-707AC)* for additional information.

**Table 4: TrueAlarm sensors**

Model	Color	Description	Compatibility	Mounting requirements
A4098-9714	White	Photoelectric smoke sensor	Bases A4098-9775, A4098-9776, A4098-9792, A4098-9789, A4098-9791, and A4098-9780	Refer to base requirements
A4098-9774	Black			
A4098-9733	White	Heat sensor		
A4098-9778	Black			
A4098-9734	White	High temperature heat sensor		

**Note:** All of these Models are NEMA 1 rated.

**Table 5: TrueAlarm sensor and base accessories**

Model	Description	Compatibility	Mounting requirements
A2098-9737	Supervised relay, mounts remote or in base electrical box	A4098-9791 base	Remote mounting requires 4 in. octagonal or 4 in. square box, 1 1/2 in. minimum depth
A4098-9860	Supervised relay, mounts remote or in base electrical box	A4098-9780 base	Base mounting requires 4 in. octagonal box, 2 1/8 in. deep with 1 1/2 in. extension ring
A2098-9808	Remote red LED alarm indicator on single gang stainless steel plate	Bases A4098-9789, A4098-9791, and A4098-9780	Single gang box, 1 1/2 in. minimum depth
A4098-9822	Unsupervised relay, tracks base led status. <b>Note:</b> Only mounts in base electrical box.	Bases A4098-9789, A4098-9791, and A4098-9780	4 in. octagonal box, 2 1/8 in. deep with 1 1/2 in. extension ring
4098-9832	Adapter plate	Bases A4098-9792, A4098-9789, A4098-9791, and A4098-9780	Required for surface or semi-flush mounted 4 in. square box and for surface mounted 4 in. octagonal box

**Note:** AA2098-9808 is NEMA 1 rated.

## Specifications

**Table 6: General operating specifications**

Specification	Rating	
Communications and sensor supervisory power	IDNet communications, auto-selected, one address for each base	
Communications connections	Screw terminals for in/out wiring, 18 to 14 AWG, 0.82 mm <sup>2</sup> to 2.08 mm <sup>2</sup>	
Remote LED alarm indicator current	1 mA typical, no impact to alarm current	
Remote LED alarm indicator and relay connections	Color coded wire leads, 18 AWG, 0.82 mm <sup>2</sup>	
UL listed operating temperature range	32°F to 100°F, 0°C to 38°C	
Operating temperature range	with A4098-9733 Heat Sensor	32°F to 122°F, 0°C to 50°C
	with A4098-9714 Smoke Sensor	15°F to 122°F, -9°C to 50°C
	with A4098-9734 Heat Sensor	32°F to 150°F, 0°C to 66°C

**Table 6: General operating specifications**

Specification	Rating
Storage temperature range	0°F to 140°F, -18°C to 60°C
Humidity range	10% to 95% RH
A4098-9714 smoke sensor air velocity rating	0 to 4000 ft/min, 0 to 1220 m/min
Housing color	Frost white or black

**Table 7: A4098-9791 Base with supervised remote relay A2098-9737**

Specification	Rating
Externally supplied relay coil voltage	18 VDC to 32 VDC, nominal 24 VDC
Supervisory current	270 $\mu$ A, from 24 VDC supply
Alarm current with A2098-9737 relay	28 mA, from 24 VDC supply
<b>Note:</b> See <a href="#">Sensor base options</a> for contact ratings.	

**Table 8: A4098-9780 Base with supervised remote relay A4098-9860**

Specification	Rating
Power	Supplied from communications

**Table 9: A4098-9822 Unsupervised relay, requirements for bases A4098-9789, A4098-9791, and A4098-9780**

Specification	Rating
Externally supplied relay coil voltage	18 VDC to 32 VDC, nominal 24 VDC
Supervisory current	Supplied from communications
Alarm current	13 mA from separate 24 VDC supply
<b>Note:</b> See <a href="#">Sensor base options</a> for contact ratings.	

